


Package Contents

1	E-Book Reader Main Unit	2	Protective Case
3	Earphone	4	USB Cable
5	Quick Guide	6	Warranty Card


Main Unit Overview

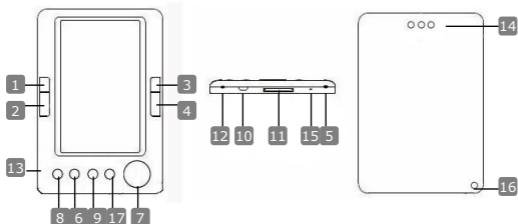


1	Previous Page	Skip to previous page, Volume down
2	Next Page	Skip to next page, Volume up
3	Previous Page	Skip to previous page, Volume down
4	Next Page	Skip to next page, Volume up
5	Power on/off	To turn on/off the device
6	Zoom Button	To zoom in/out of contents on screen
7	Directional Pad	To navigate through all options
8	Mode Button	To enter option menu
9	Return/Cancel Button	Return to previous menu or cancel
10	USB Jack	Connect to the host PC USB port
11	SD Card Slot	For inserting a SD card
12	Headphone Jack	Connect to headphones
13	MIC	To record voice
14	Speaker	Produce sound
15	Reset Button	To reboot
16	Hang Hole	Hole for tying hand strap (Not Included)
17	Home	Return to main menu

Getting Started

Power On / Power Off

- Press and hold the button  to turn on/off the device.

Charging

- It's recommended to charge the battery three successive 12 hours charging cycles.
- It takes approximately 5 hours to fully charge the device normally.
- Please recharge the device as soon as possible when the battery is in low-power level shown as .

NOTE:

Only the special charger may comply with your E-Reader. Direction of an inappropriate external power supply may cause failure of the device and will void the warranty.

- Connect the host PC USB port and the device with the USB cable provided to start charging.




Restoration to Factory Default Setting

- Reset the device by pressing reset button when device fails to start up or function properly.

Using a SD Card (SD Card Not Included)






- The device supports up to 16GB SD memory card. Insert SD memory card into SD Card Slot.

Basic Operations

Press and hold the button  to turn on the device. It will automatically enter the main menu with 8 options including **Recent Files List, eBook, Music, Video, Photo, Explorer, Record, Settings** and **User Guide**. Use the directional pad to select the desired option and press the button  to confirm. Press  to return to the main menu.



Recent Files List

- Files viewed in the past will be displayed in the section. Press directional pad to navigate to **Recent Files List** option and press the button  to confirm selection.
- Press the buttons / of the directional pad to select the desired file and press the button  to confirm. Press the button  to return.

- Press **Zoom Button** to zoom in/out of contents on screen. Press page jump buttons or directional pad to skip to the desired page.
- At the interface menu of **Recent File List**, press left button of the directional pad to delete all the files. Highlight **YES** and press ►|| to confirm. Press ↵ directly to cancel.

Note:

If files were saved on the SD card ever, they are still displayed in “Recent Files List” even if the SD card has been removed. But the files cannot be opened if the SD card is removed.

**eBook**

- The device supports 7 types of formats including .txt, .html, .doc, .pdf, .fb2, .epub, .pdf, etc. Please make sure it is NOT a DRM protected file, which cannot be read by the E-reader.
- Select file of **Flash** or **SD Card** and press button ►|| to confirm. Use ▲/▼ of the directional pad to select the desired file or press page jump buttons to skip to the desired page. Press ►|| to confirm selection.
- At the interface menu of **eBook**, press left button ◀ of the directional pad to delete the desired file. Highlight **YES** and press button ►|| to confirm. Press ↵ to cancel directly.

NOTE:

Only the files but not the whole folder can be performed the file delete.

- During text playback, press button ►|| to enter the eBook submenu. Seven different options, that is, **Page Jump**, **SaveMark**, **LoadMark**, **DelMark**, **Browser Mode**, **Flip Time** and **Mode**, are available within the section. Press button ►|| to confirm and press ↵ to return the text mode.

NOTE:

The formats of .PDF and .DOC are unavailable for the function.

**Music**

- At interface menu of **Music**, press the directional pad to select the desired file. Press button ►|| to confirm.
- At interface of music files list, press left button ◀ of the directional pad to add the desired file to favorite folder. Highlight **YES** and press button ►|| to confirm. Press ↵ to cancel directly.

- During music playback, each button functions respectively as follows.



Left button: To go to previous option / Rewind

Right button: To go to next option / Fast Forward

Up button: To Play

Down button: To Pause

- To adjust the volume level, press the page jump button to turn up/down the volume.
- During music playback, press button ►|| to enter the **Music** submenu. There are 6 different kinds of **Play Mode** to create various playback qualities.
- During music playback, press ↶ to enter background music mode. To end this mode, enter the interface of music playback and press **Down Button** to pause.



Video

- At interface menu of **Video**, press the buttons ▲/▼ of the directional pad to select the desired file. Press button ►|| to confirm.
- At interface of video files list, press left button ◀ of the directional pad to delete the desired file. Highlight **YES** and press button ►|| to confirm. Press ↶ to cancel directly.
- Select the desired file and press button ►|| to play the video. Press ►|| to resume from last playback when prompted or press ↶ to cancel.
- During video playback, each button functions respectively as follows.

►	To enter the submenu	↶	To return to previous option
⊕	To pause/play	🏠	To return to the main menu
- During video playback, press button ►|| to enter the submenu and use directional pad to select the desired option. Press ►|| to confirm or press ↶ to return.
- Press left/right buttons ◀/▶ of the directional pad to navigate to previous/next video file. Press up/down buttons ▲/▼ of directional pad or page jump buttons to adjust the volume.



Photo

The device supports picture formats such as .JPEG, .GIF, .BMP only. All other file formats will not be displayed on purpose.

- Select file of **Flash** or **SD Card** and press ►|| to confirm. Press up/down buttons ▲/▼ of the directional pad to select the desired file or press page jump buttons to skip to the desired page. Press button ►|| to confirm.
- At the interface menu of **Photo**, press left button ◀ of the directional pad to delete the desired file. Highlight **YES** and press button ►|| to confirm. Press ↵ to cancel directly.
- During photo playback, press button ►|| to enter the submenu where 5 browse modes are available. Press the directional pad to select the desired option and press ►|| to confirm.
- During photo playback, press the button 🔍 to zoom image in/out. Press page jump buttons to rotate image.
- Use directional pad to turn to previous/next image.

NOTE:

When image is rotated, the function is unavailable. Press ↵ to exit the rotation.

**File Explorer**

- Select file of **Flash** or **SD Card** and Press ►|| to confirm.
- Use up/down button ▲/▼ of the directional pad to select the desired file or press page jump buttons to skip to the desired page. Press ►|| to confirm.
- At the interface menu of **Explorer**, press left button of the directional pad to delete current file. Highlight **YES** and press ►|| to confirm. Press ↵ to cancel.

**Record**

- Press the left button of directional pad to start/continue recording sound from microphone. Press right button to pause.
- Press ↵ to stop recording and save recorded file. Highlight **YES** and press the button ►|| to confirm.
- At **Ready** state, press the Press ►|| button to enter **Record** submenu. There are two setting modes, that is, **Quality** and **Volume**, are available





System Setting

EN Use directional pad to cycle through between 9 different options such as **Display Setting, Key Lock Time, Auto Shut Time, Time, Date, Calendar, Restorable, Language** and **System Information**. Press ►|| to enter and press ↶ to return.



User Guide

An electronic version of the printed manual which can be read on the e-Reader device is provided. At main menu screen, highlight **User Guide** and press button ►|| to enter.

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.